FITTING INSTRUCTIONS Front lower ball joint kit

Partnumber: 042.746

Remove the lower arm from the vehicle.

Drill out the three rivets, securing the ball joint to the lower arm.

<u>Attention!</u>: Do not enlarge the holes in the lower arm. Remove the ball joint from the lower arm.

Refitting:

Place the ball joint flange between the two holes of the lower arm.

Fit the three nuts and screws from the repair kit, make sure that the screw heads are fitted above the arm.

Tighten the screw (to torque 40Nm. 29.52 Lbf.ft. 4.08 Kgf.M.).

