

FITTING INSTRUCTIONS

MGA-B spin-on filter adaptor

Partnumber: 011.572

KIT:

- 1 Specially Designed Filter Head
- 1 Bolt Assembly
- 1 Tab Washer
- 1 Sealing Ring

Method:

1. Remove existing oil filter canister and filter head along with the old sealing ring in the engine block.
2. Install the new sealing ring into the groove in the engine block.
3. Put the tab washer over the bolt assembly and install the bolt and filter head onto the block. Before final tightening, ensure that the tab on the washer is located between the two projections on the bottom of the filter head, and that the oil pipe fitting on the filter head is oriented correctly to suit your engine. After tightening the bolt, bend part of the tab washer up against a flat on the nut.
4. Smear a few drops of engine oil on the filter's sealing rubber, and install the filter, tightening 3/4 to 1 turn after the seal touches the filter head.
5. Use oil at the banjo bolt before fitting the oil pipe. This filter should be changed every 3,000 miles. However, any other spin-on filter may be used which has the appropriate thread size UNF, and an internal relief valve

