


# FITTING INSTRUCTIONS

## 1964-on Panhard Kit

Partnumber: 042.809

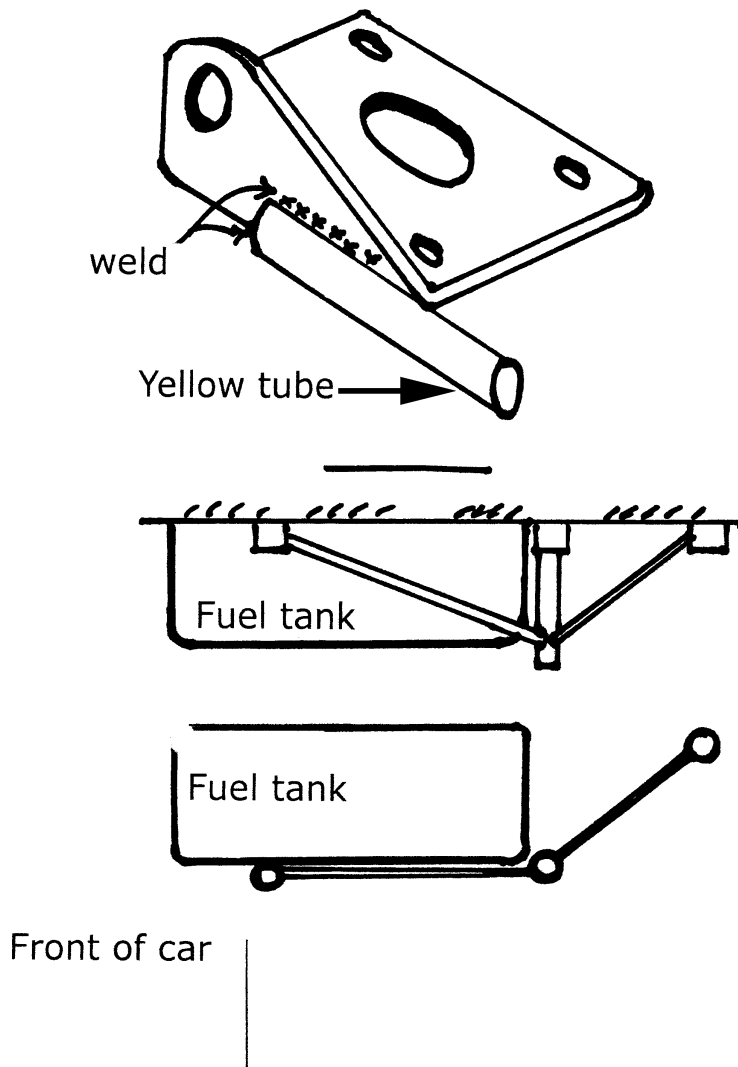

Fit the tubular tripod around the fuel tank with the long tube across the car and as close as possible to the front of the fuel tank.

Weld to the drivers side damper plate ( RHD cars )the yellow marked locating tube. This must be fitted to the damper mounting side of the plate with a 1/4" overhang at the rear.

On cars fitted with lever arm dampers, the centre line of the tube must be welded 1/2" above the bottom of the plate. On cars fitted with the spax telescopic conversion kit, the tube must be welded 1/2" below the top of the plate.

Tip : All welding must be carried out by a competent welder